


A MF MAGNAFLOW GROUP COMPANY

INSTALLATION INSTRUCTIONS | PART NO. 106-0745

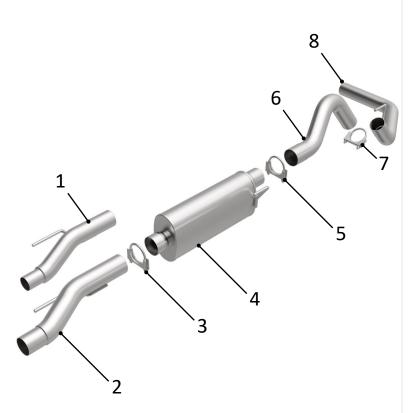

STEP 1:

(Carefully read all instructions before installation) Disconnect the vehicle's battery before removal of the OEM exhaust system. This will prevent electrical accidents and will reset the computer if it applies to the vehicle. Remove existing exhaust system from the vehicle. Only remove parts that will be replaced. Clean existing flange with a wire brush to ensure proper sealing.

STEP 2:

Attach appropriate [1] Inlet Pipe Assembly with 2.5in. Inlet or [2] Inlet Pipe Assembly with 2.75in. inlet for your vehicle application to existing exhaust and existing isolator with OE clamps.

STEP 3:

Attach [4] Muffler Assembly to [1][2] Inlet Pipe Assembly and existing isolators with supplied [3] Clamp.

STEP 4:

Attach [6] Over Axle Pipe to [4] Muffler Assembly and existing isolator with supplied [5] Clamp.

STEP 5

Attach [8] Tail Pipe Assembly to [6] Over Axle Pipe and existing isolators with supplied [7] Clamp.

STEP 6:

Ensure new exhaust is not contacting any portion of the underbody of the vehicle or drivetrain.

STEP 7:

Tighten all clamps starting from rear of the vehicle. (DO NOT EXCEED 30FT-LB WHEN TIGHTENING CLAMP AND CHECK ALL CLAMPS AFTER 50 MILES. RETIGHTEN IF NECESSARY)

WARNING:

When working on, under, or around any vehicle exercise caution. Please allow the vehicle's exhaust system to cool before removal, as exhaust temperatures may cause severe burns. If working without a lift, always consult vehicle manual for correct lifting specifications. Always wear safety glasses and ensure a safe work area. Serious injury or death could occur if safety measures are not followed.



BRExhaust recommends professional installation for all products

Technical Support: 1-800-631-7271

BRExhaust — 1901 Corporate Ctr, Oceanside, CA 92056